

Battery Prodder 31 cm Shaft



If you have questions or need advice, our friendly team is just a call or click away.

New Zealand: Shoof International Ltd. 224 Laurent Road North, Cambridge 3493, New Zealand. Ph 0800 800 801

Australia: Shoof International Pty Ltd.
1 International Square, Tullamarine VIC 3043,
Australia. Ph 1800 121 801

Chile: Shoof International Chile Ltda. Regidor Gustavo Binder 1147, Bodega 3 y 4, Osorno. Chile. Ph 800 600 000

Shoof - we make caring for animals easier. www.shoofint.com

Shoof and Taragate by Shoof are trademarks of Shoof International Ltd.

Shoof Code: 224 645







Battery Prodder

31 cm Shaft

- · 4 x 'C' battery included
- Washable, water resistance (IP 45)
- Flexible shatter-proof shaft
- High shock performance
- Safety switch to prevent accidental discharge
- No residual shock

Instructions for the Taragate Battery Prodder

I. Preparation before using:

- 1. Follow the user's manual when you operate a prodder.
- Choose the right shaft that allows you to keep a safe working distance from all livestock.
- 3. Check that all connections are clean and dry.
- 4. Insert the shaft into the handle and tighten the lock nut.
- Check that all the batteries are installed properly in the battery pack and that all connections are firmly fastened.

II. Operational Instructions:

- Turn the switch of the prodder to the "ON" position. Turn it "OFF" if you don't use it. to prevent accidental shock.
- To operate the prodder, press the button on the prodder, touch the rear of the animal with the two electrodes, the prodder releases effective electric shock, release the button. A light touch makes the most effective results.
- Because of potential for increase in intensity, operate the prodder carefully when the animals are wet.

III. How to change the batteries:

- Undo the screw to take out the battery pack and open its cover, you will see four batteries. (Model: LR14. alkaline "C" cell batteries)
- Remove the batteries and install the new ones. Pay attention to the polarity of the batteries. Tighten the battery pack screw.

IV. Note:

- Take out the batteries if you don't use the prodder for a long time (two weeks or longer).
- 2. The lifetime of the batteries will vary depending on use.
- The batteries used for this product are ordinary ones, which can be found in supermarkets and department stores.

V. Notes for use:


- 1. This product is for farm animal use only. Keep out of reach of children.
- 2. The unit can be washed with water.
- 3. Do not submerge.
- 4. Do not discharge while in water.
- 5. Waterproof (IP45) under normal use.



The waterproof connections are as follows:

A, B, C & D: Rubber rings (waterproof connections)

E: Screw

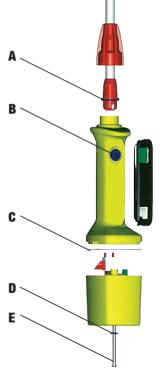



Battery Prodder 57 cm Shaft



If you have questions or need advice, our friendly team is just a call or click away.

New Zealand: Shoof International Ltd. 224 Laurent Road North, Cambridge 3493. New Zealand, Ph 0800 800 801

Australia: Shoof International Ptv Ltd. 1 International Square, Tullamarine VIC 3043, Australia, Ph 1800 121 801

Chile: Shoof International Chile Ltda. Regidor Gustavo Binder 1147, Bodega 3 v 4. Osorno, Chile, Ph 800 600 000

Shoof - we make caring for animals easier. www.shoofInt.com

Shoof and Taragate by Shoof are trademarks of Shoof International Ltd.

Shoof Code: 224 646









Battery Prodder

57 cm Shaft

- 4 x 'C' battery included
- Washable, water resistance (IP 45)
- Flexible shatter-proof shaft
- High shock performance
- Safety switch to prevent accidental discharge
- No residual shock

Instructions for the Taragate Battery Prodder

I. Preparation before using:

- 1. Follow the user's manual when you operate a prodder.
- Choose the right shaft that allows you to keep a safe working distance from all livestock.
- 3. Check that all connections are clean and dry.
- 4. Insert the shaft into the handle and tighten the lock nut.
- Check that all the batteries are installed properly in the battery pack and that all connections are firmly fastened.

II. Operational Instructions:

- Turn the switch of the prodder to the "ON" position. Turn it "OFF" if you don't use it. to prevent accidental shock.
- To operate the prodder, press the button on the prodder, touch the rear of the animal with the two electrodes, the prodder releases effective electric shock, release the button. A light touch makes the most effective results.
- Because of potential for increase in intensity, operate the prodder carefully when the animals are wet.

III. How to change the batteries:

- Undo the screw to take out the battery pack and open its cover, you will see four batteries. (Model: LR14. alkaline "C" cell batteries)
- Remove the batteries and install the new ones. Pay attention to the polarity of the batteries. Tighten the battery pack screw.

IV. Note:

- Take out the batteries if you don't use the prodder for a long time (two weeks or longer).
- 2. The lifetime of the batteries will vary depending on use.
- The batteries used for this product are ordinary ones, which can be found in supermarkets and department stores.

V. Notes for use:


- 1. This product is for farm animal use only. Keep out of reach of children.
- 2. The unit can be washed with water.
- 3. Do not submerge.
- 4. Do not discharge while in water.
- 5. Waterproof (IP45) under normal use.



The waterproof connections are as follows:

A, B, C & D: Rubber rings (waterproof connections)

E: Screw

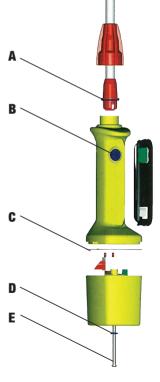



Battery Prodder 83 cm Shaft



If you have questions or need advice, our friendly team is just a call or click away.

New Zealand: Shoof International Ltd. 224 Laurent Road North, Cambridge 3493. New Zealand, Ph 0800 800 801

Australia: Shoof International Ptv Ltd. 1 International Square, Tullamarine VIC 3043, Australia, Ph 1800 121 801

Chile: Shoof International Chile Ltda. Regidor Gustavo Binder 1147, Bodega 3 v 4. Osorno, Chile, Ph 800 600 000

Shoof - we make caring for animals easier. www.shoofInt.com

Shoof and Taragate by Shoof are trademarks of Shoof International Ltd.

Shoof Code: 224 647









Battery Prodder

83 cm Shaft

- 4 x 'C' battery included
- Washable, water resistance (IP 45)
- Flexible shatter-proof shaft
- High shock performance
- Safety switch to prevent accidental discharge
- No residual shock

Instructions for the Taragate Battery Prodder

I. Preparation before using:

- 1. Follow the user's manual when you operate a prodder.
- Choose the right shaft that allows you to keep a safe working distance from all livestock.
- 3. Check that all connections are clean and dry.
- 4. Insert the shaft into the handle and tighten the lock nut.
- Check that all the batteries are installed properly in the battery pack and that all connections are firmly fastened.

II. Operational Instructions:

- Turn the switch of the prodder to the "ON" position. Turn it "OFF" if you don't use it. to prevent accidental shock.
- To operate the prodder, press the button on the prodder, touch the rear of the animal with the two electrodes, the prodder releases effective electric shock, release the button. A light touch makes the most effective results.
- Because of potential for increase in intensity, operate the prodder carefully when the animals are wet.

III. How to change the batteries:

- Undo the screw to take out the battery pack and open its cover, you will see four batteries. (Model: LR14. alkaline "C" cell batteries)
- Remove the batteries and install the new ones. Pay attention to the polarity of the batteries. Tighten the battery pack screw.

IV. Note:

- Take out the batteries if you don't use the prodder for a long time (two weeks or longer).
- 2. The lifetime of the batteries will vary depending on use.
- The batteries used for this product are ordinary ones, which can be found in supermarkets and department stores.

V. Notes for use:

- 1. This product is for farm animal use only. Keep out of reach of children.
- 2. The unit can be washed with water.
- 3. Do not submerge.
- 4. Do not discharge while in water.
- 5. Waterproof (IP45) under normal use.



The waterproof connections are as follows:

A, B, C & D: Rubber rings (waterproof connections)

E: Screw

