



Great value farming products

# Battery Prodder

- 4 x 'C' battery included
- Washable, water resistance (IP 45)
- Flexible shatter-proof shaft
- High shock performance
- Safety switch to prevent accidental discharge
- No residual shock

**31cm**  
shaft



Great value farming products

**Battery Prodder**  
with **31cm** shaft



Shoof Code: 224 645

Manufactured for:

**SHOOF**  
INTERNATIONAL LTD

New Zealand:  
Shoof International Ltd  
Ph 0800 800 801  
[www.shoof.co.nz](http://www.shoof.co.nz)

Australia:  
Shoof International  
Pty Ltd  
Ph 1800 121 801  
[www.shoof.com.au](http://www.shoof.com.au)

Chile  
Shoof International Chile Ltda  
Ph 800 600 000  
[www.shoof.cl](http://www.shoof.cl)

# User's Manual for Farmhand Prodder

## I. Preparation before using:

1. Follow the user's manual when you operate a prodder.
2. Choose the right shaft that allows you to keep a safe working distance from all livestock.
3. Check that all connections are clean and dry.
4. Insert the shaft into the handle and tighten the lock nut.
5. Check that all the batteries are installed properly in the battery pack and that all connections are firmly fastened.

## II. Operational Instructions:

1. Turn the switch of the prodder to the "ON" position. Turn it "OFF" if you don't use it, to prevent accidental shock.
2. To operate the prodder, press the button on the prodder, touch the rear of the animal with the two electrodes, the prodder releases effective electric shock, release the button. A light touch makes the most effective results.
3. Because of potential for increase in intensity, operate the prodder carefully when the animals are wet.

## III. How to change the batteries:

1. Undo the screw to take out the battery pack and open its cover, you will see four batteries. (Model: LR14, alkaline "C" cell batteries)
2. Remove the batteries and install the new ones. Pay attention to the polarity of the batteries. Tighten the battery pack screw.

## IV. Note:

1. Take out the batteries if you don't use the prodder for a long time (two weeks or longer).
2. The lifetime of the batteries will vary depending on use.
3. The batteries used for this product are ordinary ones, which can be found in supermarkets and department stores.


## V. Notes for use:

1. This product is for farm animal use only. Keep out of reach of children.
2. The unit can be washed with water.
3. Do not submerge.
4. Do not discharge while in water.
5. Waterproof (IP45) under normal use.

The waterproof connections are as follows:

A, B, C & D: Rubber rings (waterproof connections)

E: Screw

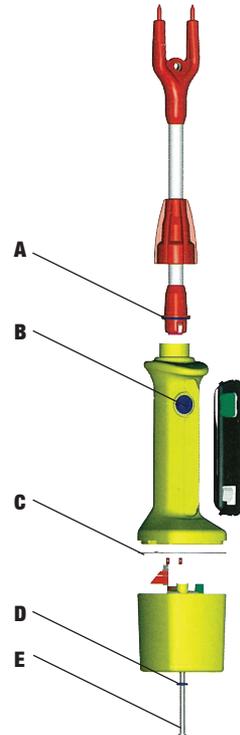



Great value farming products

# Battery Prodder

- 4 x 'C' battery included
- Washable, water resistance (IP 45)
- Flexible shatter-proof shaft
- High shock performance
- Safety switch to prevent accidental discharge
- No residual shock

**57cm**  
shaft



Great value farming products

**Battery Prodder**  
with **57cm** shaft



Shoof Code: 224 646

Manufactured for:

**SHOOF**  
INTERNATIONAL LTD

New Zealand:  
Shoof International Ltd  
Ph 0800 800 801  
[www.shoof.co.nz](http://www.shoof.co.nz)

Australia:  
Shoof International  
Pty Ltd  
Ph 1800 121 801  
[www.shoof.com.au](http://www.shoof.com.au)

Chile  
Shoof International Chile Ltda  
Ph 800 600 000  
[www.shoof.cl](http://www.shoof.cl)

# User's Manual for Farmhand Prodder

## I. Preparation before using:

1. Follow the user's manual when you operate a prodder.
2. Choose the right shaft that allows you to keep a safe working distance from all livestock.
3. Check that all connections are clean and dry.
4. Insert the shaft into the handle and tighten the lock nut.
5. Check that all the batteries are installed properly in the battery pack and that all connections are firmly fastened.

## II. Operational Instructions:

1. Turn the switch of the prodder to the "ON" position. Turn it "OFF" if you don't use it, to prevent accidental shock.
2. To operate the prodder, press the button on the prodder, touch the rear of the animal with the two electrodes, the prodder releases effective electric shock, release the button. A light touch makes the most effective results.
3. Because of potential for increase in intensity, operate the prodder carefully when the animals are wet.

## III. How to change the batteries:

1. Undo the screw to take out the battery pack and open its cover, you will see four batteries. (Model: LR14, alkaline "C" cell batteries)
2. Remove the batteries and install the new ones. Pay attention to the polarity of the batteries. Tighten the battery pack screw.

## IV. Note:

1. Take out the batteries if you don't use the prodder for a long time (two weeks or longer).
2. The lifetime of the batteries will vary depending on use.
3. The batteries used for this product are ordinary ones, which can be found in supermarkets and department stores.


## V. Notes for use:

1. This product is for farm animal use only. Keep out of reach of children.
2. The unit can be washed with water.
3. Do not submerge.
4. Do not discharge while in water.
5. Waterproof (IP45) under normal use.

The waterproof connections are as follows:

A, B, C & D: Rubber rings (waterproof connections)

E: Screw

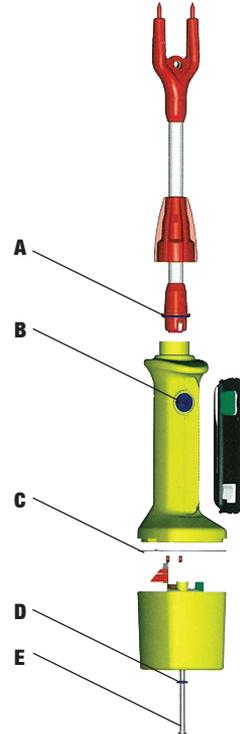



Great value farming products

# Battery Prodder

- 4 x 'C' battery included
- Washable, water resistance (IP 45)
- Flexible shatter-proof shaft
- High shock performance
- Safety switch to prevent accidental discharge
- No residual shock

**83cm**  
shaft



Great value farming products

**Battery Prodder**  
with 83cm shaft



Shoof Code: 224647

Manufactured for:

**SHOOF**  
INTERNATIONAL LTD

New Zealand:  
Shoof International Ltd  
Ph 0800 800 801  
[www.shoof.co.nz](http://www.shoof.co.nz)

Australia:  
Shoof International  
Pty Ltd  
Ph 1800 121 801  
[www.shoof.com.au](http://www.shoof.com.au)

Chile  
Shoof International Chile Ltda  
Ph 800 600 000  
[www.shoof.cl](http://www.shoof.cl)

# User's Manual for Farmhand Prodder

## I. Preparation before using:

1. Follow the user's manual when you operate a prodder.
2. Choose the right shaft that allows you to keep a safe working distance from all livestock.
3. Check that all connections are clean and dry.
4. Insert the shaft into the handle and tighten the lock nut.
5. Check that all the batteries are installed properly in the battery pack and that all connections are firmly fastened.

## II. Operational Instructions:

1. Turn the switch of the prodder to the "ON" position. Turn it "OFF" if you don't use it, to prevent accidental shock.
2. To operate the prodder, press the button on the prodder, touch the rear of the animal with the two electrodes, the prodder releases effective electric shock, release the button. A light touch makes the most effective results.
3. Because of potential for increase in intensity, operate the prodder carefully when the animals are wet.

## III. How to change the batteries:

1. Undo the screw to take out the battery pack and open its cover, you will see four batteries. (Model: LR14, alkaline "C" cell batteries)
2. Remove the batteries and install the new ones. Pay attention to the polarity of the batteries. Tighten the battery pack screw.

## IV. Note:

1. Take out the batteries if you don't use the prodder for a long time (two weeks or longer).
2. The lifetime of the batteries will vary depending on use.
3. The batteries used for this product are ordinary ones, which can be found in supermarkets and department stores.

## V. Notes for use:

1. This product is for farm animal use only. Keep out of reach of children.
2. The unit can be washed with water.
3. Do not submerge.
4. Do not discharge while in water.
5. Waterproof (IP45) under normal use.

The waterproof connections are as follows:

A, B, C & D: Rubber rings (waterproof connections)

E: Screw

